

PANEL PIEZO NOTIFICATIONS Simon XT

A Panel Piezo Beep is an audible beep that notifies you of a trouble condition such as a low battery, power failure, communication trouble, etc. For your safety Guardian Protection Services recommends that the panel piezo beeps are enabled on your system. Having the beeps enabled will ensure that your system notifies you of the entry and exit delay time by beeping upon entry and exit of your home.

If a Customer Care Representative has assisted you in disabling your panel piezo beeps, please follow the below instructions to enable the notifications once the system issue has been resolved.

STEP 1	Scroll through the menu using the arrow buttons and choose SYSTEM PROGRAMMING
STEP 2	Press the OK button
STEP 3	Enter your 4-digit master code
STEP 4	Press the OK button
STEP 5	Scroll through the programming menu using the arrow buttons and choose SIREN OPTIONS
STEP 6	Press the OK button
STEP 7	PIEZO BEEPS will display and status will show OFF

CONTINUED ON NEXT PAGE





PANEL PIEZO NOTIFICATIONS Simon XT

STEP 8	Press the OK button
STEP 9	Press the arrow button until the status shows PIEZO BEEPS – ON
STEP 10	Press the OK button
STEP 11	Press the STAUS button repeatedly to exit system programming

If you require assistance in enabling your panel piezo beeps/notifications, please contact Guardian's Customer Care Department at 1-888-895-4805. Thank you for choosing Guardian Protection Services.

